

Fiber Instrument Sales, Inc.



Daily / Weekly Fusion Splicer Cleaning


Daily / Weekly Fusion Splicer Cleaning



1. Turn Off Your Splicer



2. Use foam swabs with 99% pure Isopropyl alcohol

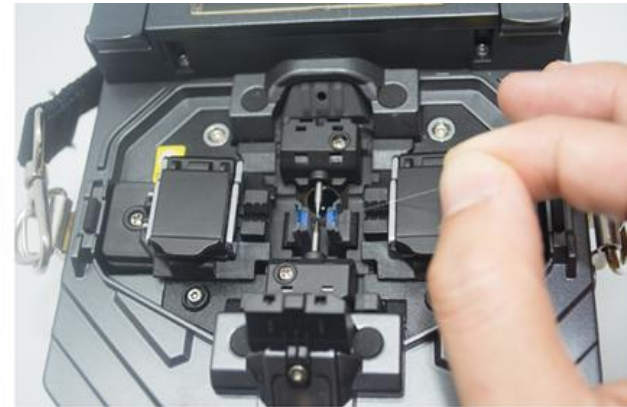


3. Prepare a cleaned and cleaved fiber and push it through the V-Groove to clean out any dirt and grime.


Daily / Weekly Fusion Splicer Cleaning



- 4.**
Remove electrodes
carefully with a screwdriver

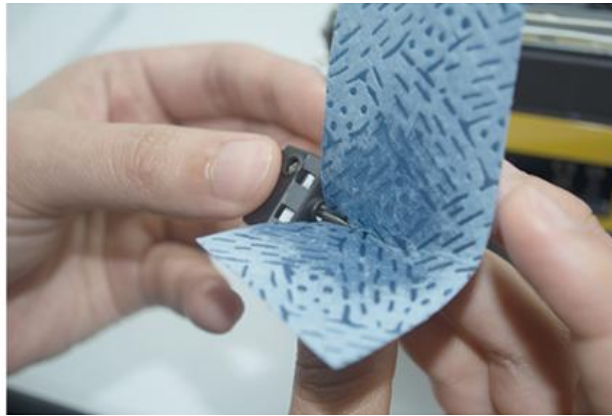

- 5.**
Use a lint-free wipe and
isopropyl alcohol 99% pure
or better to clean

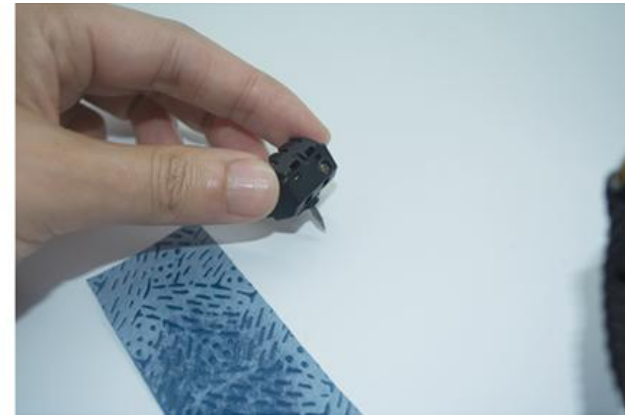

HANDLE WITH CARE!
Damaging the electrode tip
will cause high splice loss

Daily / Weekly Fusion Splicer Cleaning



6.

Use foam swabs with 99% pure isopropyl alcohol to clean and wipe dry the:

- a. Mirrors
- b. Cameras/Lenses



7.

Use foam swabs with 99% pure isopropyl alcohol to clean and wipe dry:

- a. Fiber holders
- b. Fiber dampers



Tip!

Cleaning your splicer regularly will keep it working in perfect order



Fiber Instrument Sales, Inc.
800-5000-FIS